
Digisoft V3.25

FOR DIGITAL MFC

User's Manual

**QUALIFLOW S.A.**

Le Millénaire
395, rue Louis Lépine – B.P. 7
34935 MONTPELLIER - CEDEX 9
France
Ph#: +33 (0)4 67 99 47 47
Fax#: +33 (0)4 67 99 47 48

QUALIFLOW Technology Center

44862 Osgood Road
CA-94539
Fremont
CALIFORNIA – USA
Ph#: +1 (510) 440 93 74
Fax#: +1 (510) 440 93 75

QUALIFLOW Japan

3F Hattori Bldg.
30 Yotsuya
4 – Chome Shijuku-ku
Tokyo 160-0004
Japan
Ph#: +81 (0)3 5368 1682
Fax#: +81 (0)3 5368 1683

Identification					
Reference	D10-092	Revision	V03	Date	24 / 12 / 2003
Document name	Digisoft V3.25 - User's Manual				
File name	Digisoft_V3_25_UserManual.doc				

Control					
Author		Verified		Approved	
Visa	Date	Visa	Date	Visa	Date
Gilles Sanchez	Dec 24, 2003	Albin Diranzo	Dec 24, 2003	Mathieu Bourgarit	Dec 24, 2003

History				
Author	Date	Description	Revision	Status
Pierre Navratil Olivier Léonel	Dec 2000	Initial version	V00	Complete
Gilles Sanchez	Sept 01, 2003	Update to Digisoft V3.23	V01	Complete
Gilles Sanchez	Dec 23, 2003	Update to Digisoft V3.24	V02	Complete
Gilles Sanchez	June, 2004	Update to Digisoft V3.25	V03	Draft

TABLE of CONTENTS

1. DESCRIPTION	1
2. REFERENCE DOCUMENTATION.....	1
3. SCOPE & COMPATIBILITY	2
4. SOFTWARE INSTALLATION.....	2
4.1. INSTALLATION PROCEDURE	2
4.2. RUNNING DIGISOFT V3.25	6
4.3. COMMAND LINE PARAMETERS.....	6
5. HARDWARE CONNECTION	7
5.1. CONNECTOR	7
5.2. RS232C INTERFACE	8
5.3. RS485 MODBUS INTERFACE.....	9
6. SOFTWARE STARTING	10
7. WINDOW TABS	12
7.1. SERIAL TAB.....	12
7.2. INFORMATION TAB.....	13
7.2.1. Overview.....	13
7.2.2. MFC address	14
7.2.3. Valve type	14
7.2.4. Access level.....	15
7.2.5. Tools	16
7.3. CALIBRATION SLOT TAB	17
7.4. REGULATION TAB	18
7.4.1. Overview.....	18
7.4.2. Actuator menu.....	19
7.4.3. Digital mode	19
7.4.4. Auto zero.....	19
7.4.5. External sensor.....	20
7.4.6. Flow unit.....	21
7.4.7. Graphic area features.....	21
7.4.8. Sample rate	24
7.4.9. Dynamic adjustment	24
7.4.9.1. Overview.....	24
7.4.9.2. Internal sensor.....	25
7.4.9.3. External sensor.....	26
7.4.10. Specific error message: error 140.....	27
7.5. ALARMS TAB	28
7.5.1. Overview.....	28
7.5.2. Regulation monitoring.....	28
7.5.3. Error parameters	29
7.5.4. History recorder	30
7.6. OTHERS TAB	31
7.6.1. Overview.....	31
7.6.2. Ramp rate	31
7.6.3. Analog readout (On/Off).....	32
7.6.4. Automatic Auto-zero (On/Off)	32
7.6.5. Readout DAC Offset	32
7.6.6. Soft start (On/Off).....	33
7.6.7. Total accumulator.....	35

1. Description

This manual is designed for users of **Digisoft V3.25** software; QUALIFLOW' software for digital mass flow controllers communication.



For further information, feel free to contact your QUALIFLOW' sales representative. A list of Qualiflow's representatives is available on our web site at www.qualiflow.com.

2. Reference Documentation

The following documents represent also an interesting source of information and give further information on the use of Digisoft tools and options:

- SEMI E52-1000 Practice for referencing gases used in digital mass flow controllers;
- External readout application note: [External readout MFC Applications.pdf](#);
- Multicalibration application note: [Multicalibration.pdf](#).

3. Scope & Compatibility

This manual applies to **QUALIFLOW Digisoft software V3.25**.

Version 3.25 is compatible with MFC Firmware 7.40 and higher. A backwards compatibility has been kept although support for the version 6.81 might present some weakness. However it is recommended to upgrade your firmware to the last in-board software rev 7.40 for best results.

WARNING

Firmware V7.40 is not compatible with versions of Digisoft older than V3.25. Feel free to contact Qualiflow for more information.

Required configuration:

Any compatible PC with 486 or Pentium processor with CD-ROM, 640x480 minimum screen size and Microsoft Windows 95, 98, 2000 or NT4.x. Windows 3.1 is not supported. 3 Mb Hard disk drive space and 8 MB RAM space are enough to run Digisoft.

4. Software Installation

4.1. Installation procedure

Installation:

- Insert the Qualiflow Digisoft CD-ROM into your disk drive;
- Browse the disk from your **Explorer**;
- Start the program file "**Setup.exe**" from the Digisoft directory on the CD-ROM;



- Follow instructions on your screen to install Digisoft V3.25;




- Enter your name and company name;




- Choose your installation directory on your computer or keep the default path;



- You can specify the program folder in the **Start menu**;

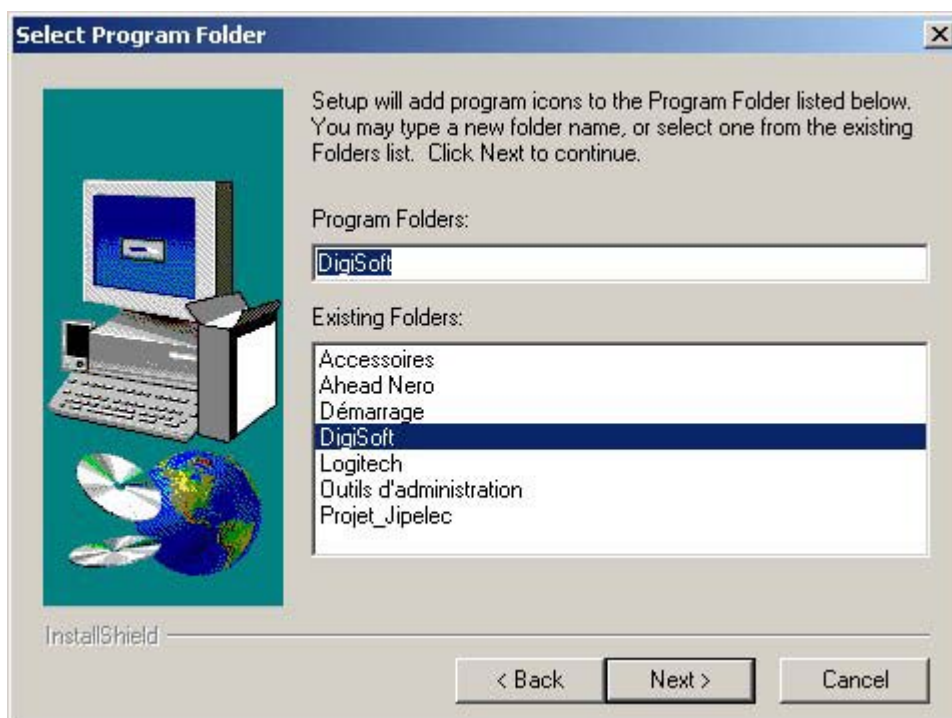

- Before finishing the installation, a quick sum up is given below. Check information and click next to finish copying Digisoft program files;

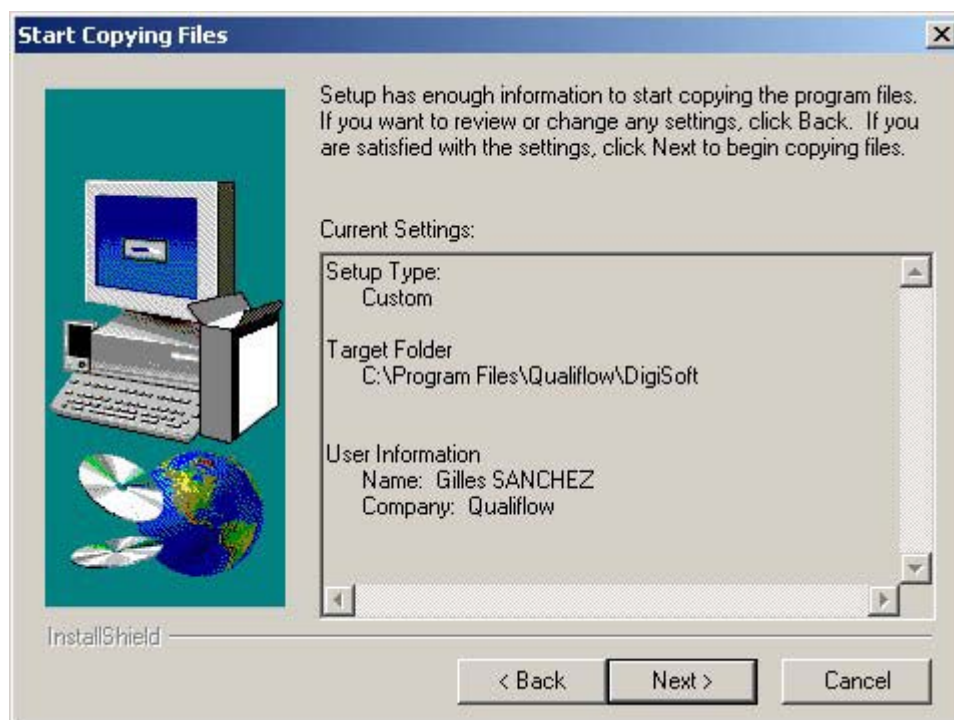

- Once files are copied, the following dialog ends the installation wizard:



NOTICE

When the installation wizard is completed, you do not need to restart your computer.

4.2. Running Digisoft V3.25

Before starting the program, we do recommend to :

- Read carefully the whole manual;
- Connect one MFC on one mass-flow serial port prior to run Digisoft.

To start the program, see **section 6** for further information.

4.3. Command line parameters

Command line parameters can be used with the executable file running the software.

The syntax is as follows:


C:\[directory]\Digisoft.exe param1 param2

Parameters:

- **demo:** Digisoft enters demo mode. MFC is not needed in this mode;
- **nologo:** the welcome logo does not show up;
- **comX:** access directly the com number X; default com1;
- **addY:** access directly the MFC number Y ; default add1;
- **bdrZ:** set baud rate. (example : BDR19200; default BDR2400);
- **ms:** allow for multi session.

Notice:


- When using **comX** parameter, others com port will not be scanned.
- Note that **add0** brings an input query dialog box.

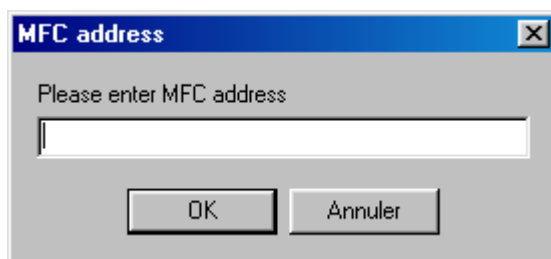

5. Hardware Connection

5.1. Connector

Here is an illustration of a mass flow top connector for pin-out configuration:

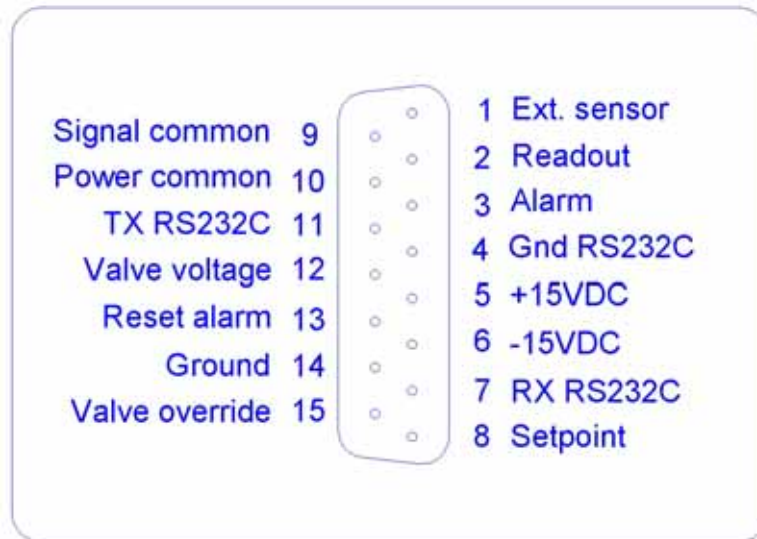

For further information on connecting precautions, refer to the appropriate **mass flow controller user's manual**. A wrong pin-out configuration could lead to major damages on your mass flow controller.


Digisoft uses the following pins for communication with a mass flow controller:

- 4 = GND RS232C;
- 7 = RX RS232C;
- 11 = TX RS232C.

The other pins of the top connector are used exclusively by the electronic card of the mass flow controller.


Note: The power supply: +15V / 0V / -15V must be connected to the connector. For 1 or 2 mass flow controllers, Qualiflow recommends the following power supply **6730025Q-01**.

5.2. RS232C interface

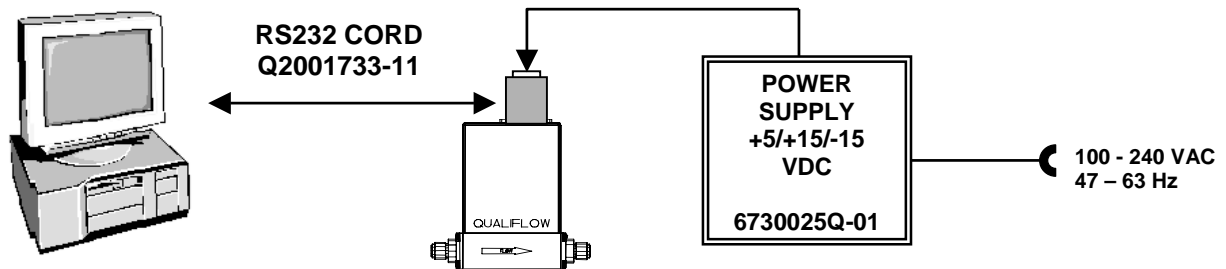


In order to connect also a computer through a RS232C cable, QUALIFLOW recommends to use one of the following connector:

- Serial Connector adaptor with same SUB- D 15 pin-out: **Q2001733-6** (model 4).

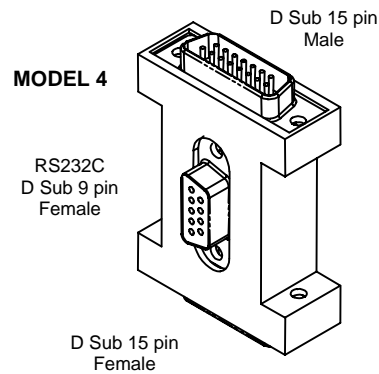

- Serial Connector adaptor standard MFC Card-Edge Connector: **Q2001733-08** (model 2).

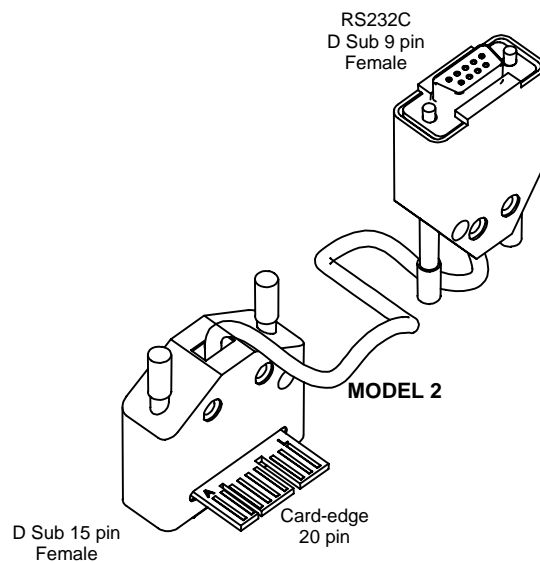


RS232C & Power Supply kit for Qualiflow Digital MFC's all series

When connecting individually a Digital MFC to a computer, use an interface kit: **Q2001733-12**.

It includes :

- serial connector adaptor, P/N **Q2001733-06**;
- power supply assy 120/230 VAC, +/-15VDC, P/N **6730025Q-01**;
- power cord from power supply to MFC, length 1 meter, P/N **2990976Q**;
- RS232C cord from MFC to computer, length 2 meters, P/N **Q2001733-11 SP**.

5.3. RS485 MODBUS interface

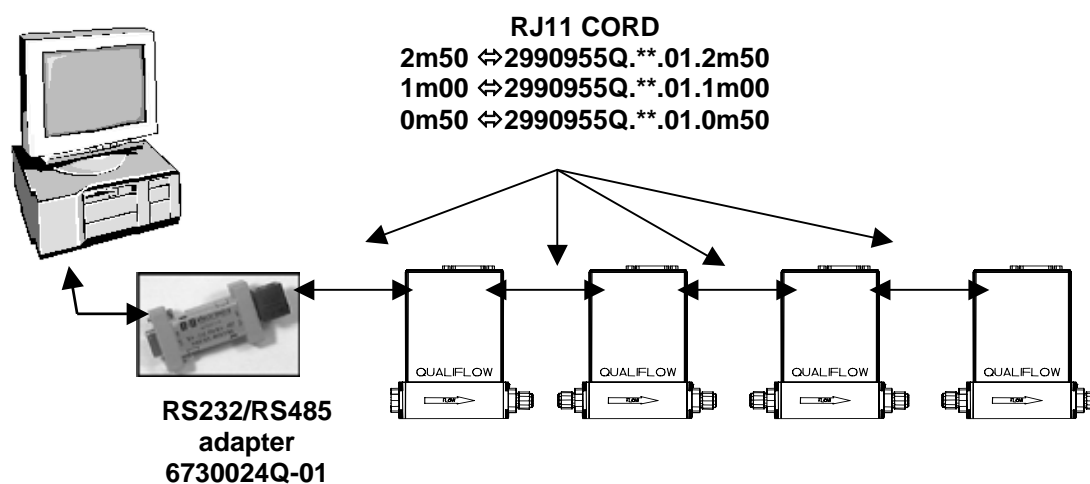

RS485/MODBUS accessories

When connecting several Digital MFC to a computer :

- RS232/RS485 converter, PN **6730024Q-01**;
- RJ11-RJ11 cable 2m50, PN **2990955Q.**.01.2m50**;
- MFC Power supply for 4 MFCs (+/- 15V), PN **6730025Q-01**.

6. Software Starting

Before starting the program, we do recommend to:

- read carefully the whole manual;
- connect one MFC on one mass-flow serial port prior to run Digisoft.

Then click on the following icon from the program folder of the **Start menu** of Windows:



Digisoft.exe

The introduction frame appears on screen:



Then the main **Digisoft** windows appears.



Digisoft 3.25 will automatically recognize the baud rate available: 2400, 9600, 19200, 38400 baud rates.

The following window may appear:

- If no mass-flow is connected or if there is a bad connection;
- If the Modbus device identifier address of the mass-flow is not set to 1.



In case no mass-flow is connected or if there is a bad connection, Digisoft will scan from address 0 to 255 without being able to find any MFC. In case the Modbus device address of the mass-flow is not set to 1, Digisoft will scan from address 0 until the Modbus device identifier address of the mass flow is found and then the main Digisoft window will appear.

If you click "**Cancel**", the following warning message appears:



But Digisoft will continue to run without any MFC connected, leading to hazardous software results. In this case when the main Digisoft window appears, click on "**EXIT**" to quit Digisoft and recheck your mass flow controller connection (see **section 5 for hardware connection**).

7. Window Tabs

7.1. SERIAL tab

This page is the default opening page when the software is started.




The software automatically chooses the first serial port on which a QUALIFLOW digital MFC is found. However if there are several mass-flows connected on several serial communication ports, the scroll down list allows to choose the serial communication port number.

NOTICE

At the bottom of each page, the status line indicates:

1. The number of the chosen calibration (named 'Gas Slot'), the corresponding full scale, the unit, as well as the corresponding process gas.

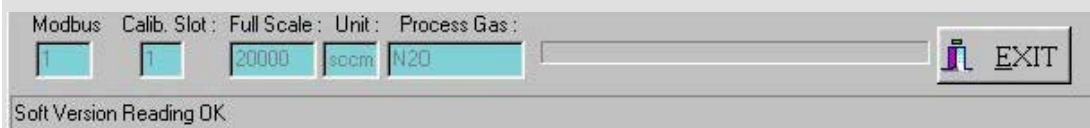

2. A communication progress bar.

7.2. INFORMATION tab

7.2.1. Overview

The identification frame provides you with the main identification parameters of the connected MFC:

- Manufacturer identifier;
- Product identifier;
- Serial number of MFC;
- Serial number of the sensor;
- Number of the soft version of the micro-controller inside the mass-flow controller (firmware version);

The screenshot shows the 'INFORMATION' tab of the 'Qualiflow's Digital Control' software. The window title is 'DEMO MODE - Qualiflow's Digital Control - 3.25 25 May 2004'. The interface includes several tabs: SERIAL, INFORMATION (selected), CALIBRATION SLOT, REGULATION, ALARMS, and OTHERS.

The 'Identification' section on the left contains the following fields:

- Manufacturer Identifier: A dropdown menu.
- Product Identifier: A dropdown menu.
- MassFlow Serial Number: A text input field.
- Sensor Serial Number: A text input field.
- Software Version: A text input field containing '7.99'.

The 'MFC address' section on the right contains:

- Current address: A numeric input field with '1'.
- Validate current address: A button.
- New address: A numeric input field with '1'.
- Write new address: A button with a floppy disk icon.
- Search Modbus address: A button with a question mark icon.

The 'Valve Type' section on the right contains two radio buttons:

- ☒ NO (Normally Open)
- ☐ NC (Normally Closed)

At the bottom of the main panel are four buttons: 'Read' (with a floppy disk icon), 'Write' (with a floppy disk icon), 'Level Access' (with a dashed border), and 'PRINT' (with a printer icon).


The bottom status bar contains the following fields:

- Modbus: A numeric input field with '1'.
- Calib. Slot: A numeric input field with '1'.
- Full Scale: A numeric input field with '0'.
- Unit: A dropdown menu with 'sccm' selected.
- Process Gas: A text input field.
- EXIT: A button with a floppy disk icon.

The status bar also displays the text 'Valve Type Reading OK'.


7.2.2. MFC address

The "MFC address" frame allows to change or search for the Modbus address of the mass-flow. The Modbus address allows to give a different address to each mass-flow when several mass-flows are on the same cable (RS485 cable). As Digisoft 3.25 program is designed to run with only one mass-flow per connection, it is not recommended to change the Modbus address.

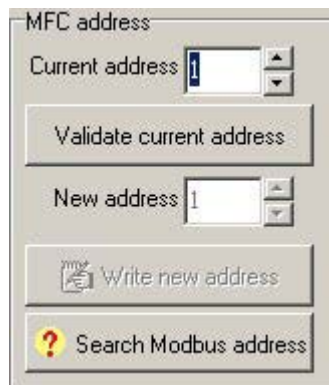


7.2.3. Valve type

According to the mass flow controller configuration, the respective checkbox is selected by default when Digisoft starts (NO normally open or NC normally closed).

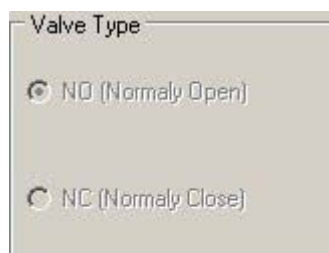

The two functions are activated in CUSTOMER access level. See **section 7.2.4** for further details on access level.

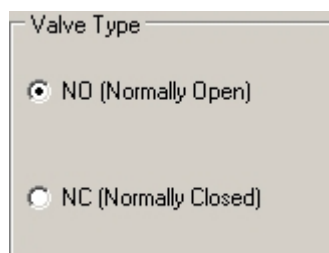

7.2.4. Access level

The "Access level" button asks for a password for more advanced functions.



Two levels access are set in Digisoft: BASIC and CUSTOMER. By default, when Digisoft is started, the BASIC level is on. Password for CUSTOMER level is provided to the user if **trained** on Digisoft by **Qualiflow's engineers**.

BASIC level

BASIC level is run by default when Digisoft starts. If you want to change to CUSTOMER level, select the **INFORMATION** tab and click on "Access Level".

CUSTOMER level

To access this level, enter the password in the "Access Level" dialog box.

Advanced options are activated in the different tabs of Digisoft:

- | | |
|--|--|
| • Valve type selection | see section 7.2.3; |
| • External sensor on / off | see section 7.4.5; |
| • Dynamic adjustment for external sensor | see section 7.4.9.3; |
| • Gas slot parameters edition | Advanced parameters for qualified users; |
| • Calibration tab | Advanced parameters for qualified users. |

WARNING

If the CUSTOMER level is used without Qualiflow support engineers approval, product warranty is void as the use and modification of advanced parameters is restricted to Qualiflow's engineer.

7.2.5. Tools

The "Print" button allows to print a sheet with the configuration and identification parameters of the mass flow controller.

The screenshot shows a software window titled "MFC Information". The window contains a toolbar with icons for file operations and a "Fermer" (Close) button. The main content area displays the "qualiflow" logo and contact information for QUALIFLOW, including their address in Montpellier, France, phone and fax numbers, and their website. Below this, a section titled "DIGITAL FLOW CONTROLLER CONFIGURATION STATE" provides a detailed overview of the device's settings. This includes identification numbers (Product, Manufacturer, MFC Serial, Sensor Serial), valve type, and microcontroller version. It also lists the current gas slot and the calibration status of ten gas slots, all of which are currently "No Calibrated.". Further down, the configuration parameters are listed, such as setpoint (Digital), regulation alarm limits, delay, automatic autozero, softstart, history, rate, hold on zero, ramping, analog readout range, external regulation, readout source, and readout DAC offset. The status bar at the bottom indicates "0% Page 1 sur 1".

qualiflow

QUALIFLOW
360, rue Alfred Nobel
Le Millénaire, B.P. 7
34035 Montpellier Cedex 9 - France

Phone : 33 (0)4 67 99 47 47
Fax : 33 (0)4 67 99 47 48
HTTP : <http://www.qualiflow.com>

DIGITAL FLOW CONTROLLER CONFIGURATION STATE

Product Identifier : 0000000000 Printed : 08/06/2004
 Manufacturer Identifier : 0000
 MFC Serial Number : 0000000000
 Sensor Serial Number : 0000000000
 Valve Type : NO
 Microcontroller Soft Version : 7.99 MODBUS address : 0

Current GAS Slot : 1

Gas Slot 1 : No Calibrated.
 Gas Slot 2 : No Calibrated.
 Gas Slot 3 : No Calibrated.
 Gas Slot 4 : No Calibrated.
 Gas Slot 5 : No Calibrated.
 Gas Slot 6 : No Calibrated.
 Gas Slot 7 : No Calibrated.
 Gas Slot 8 : No Calibrated.
 Gas Slot 9 : No Calibrated.
 Gas Slot 10 : No Calibrated.

Setpoint : Digital
 Regulation Alarm Min : 0 %
 Max : 0 %
 Delay : 0 s
 Regulation Alarm Warning : ON
 Safe state valve : Close
 Safe valve value : 0
 Automatic Autozero : OFF
 Delay : 0 s
 Softstart : OFF
 Delay : 0 s

History : OFF
 Rate : 0s
 Hold on zero : OFF
 Ramping : 0
 Analog Readout : -0.5V to 5.5V
 External Regulation : OFF
 Readout : From sensor measurement
 Readout DAC Offset : -1000 mV

0% Page 1 sur 1

The "Read" command button allows reloading the identification parameters of the mass flow controller.

7.3. CALIBRATION SLOT tab

In this Digisoft tab, all calibrations available in memory are described with full scale, unit, gas process name, gas process symbol, gas process SEMI Code (Ref: *SEMI E52-1000 Practice for referencing gases used in digital mass flow controllers*) and the gas used during calibration.

The calibration curve can be selected changing the calibration slot from the scroll down list in "Calibration slot currently in use".

	Full scale	Unit	Gas	Gas symbol	Semi code	Calibration gas
Slot #1			Not calibrated			
Slot #2			Not calibrated			
Slot #3			Not calibrated			
Slot #4			Not calibrated			
Slot #5			Not calibrated			
Slot #6			Not calibrated			
Slot #7			Not calibrated			
Slot #8			Not calibrated			
Slot #9			Not calibrated			
Slot #10			Not calibrated			

Make a new Gas Slot Wizard

This button accesses a wizard allowing to add a new gas slot by giving the requested gas and full scale.



WARNING

This option must only be used by qualified users who have been trained by Qualiflow's engineers.

Refer to specific documentation for further details on the use of this Digisoft option. See **section 2 for documentation references**.


Tool

The "Read" button reloads data from the mass flow controller to fill the calibration slot table.

7.4. REGULATION tab

7.4.1. Overview

This is the main tab of Digisoft as it gives all necessary tools for mass flow controller operation.

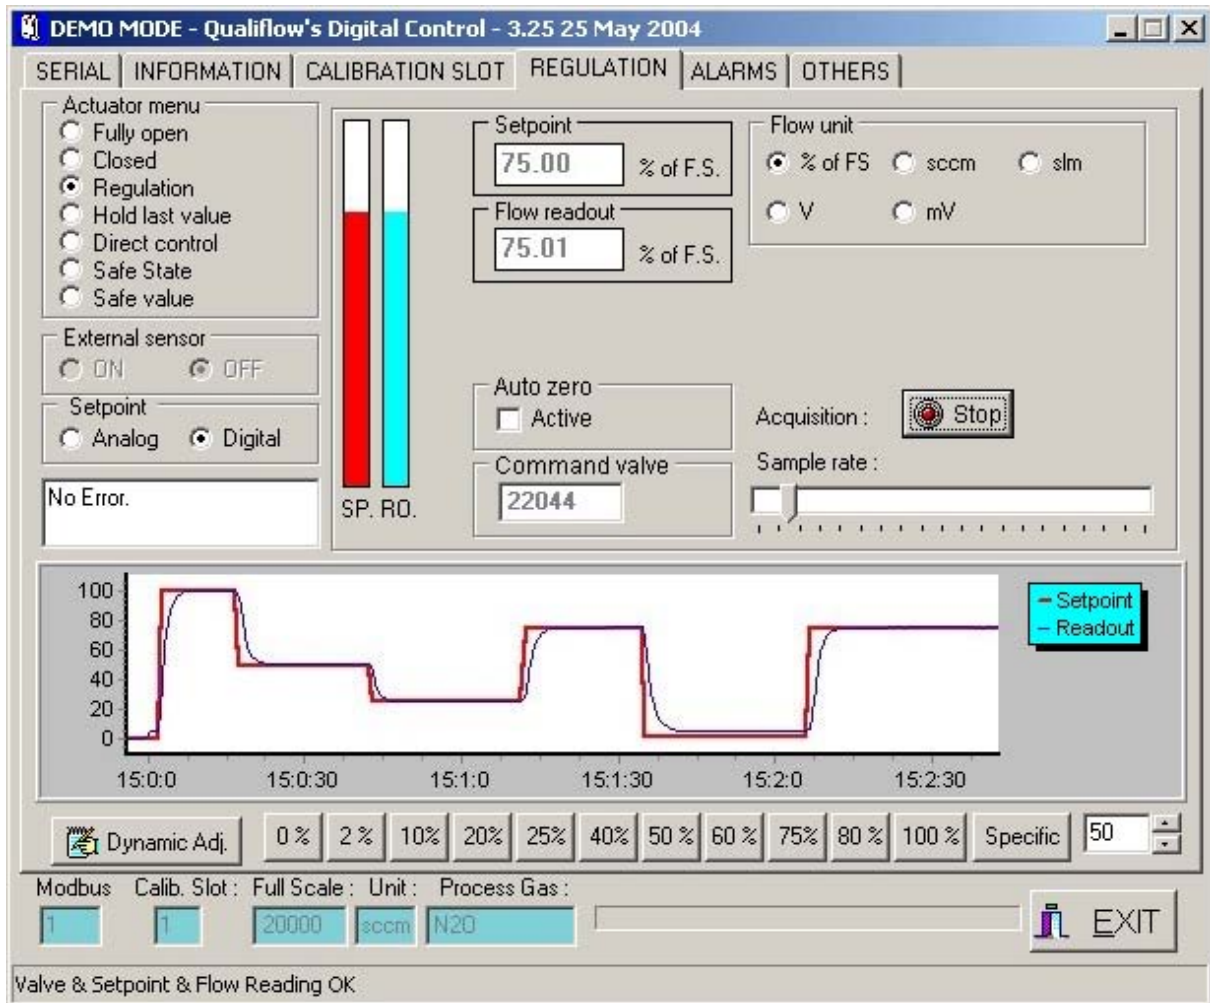


The **regulation** can be chosen either in digital mode or analog mode:

- Analog mode: the setpoint is the 0-5V voltage applied on pin 8 of the SUB D15 connector;
- Digital mode: the setpoint is a numerical value transmitted by the RS232 or the RS485 connection.

7.4.2. Actuator menu

This frame sets the actuator mode according to your requirements:

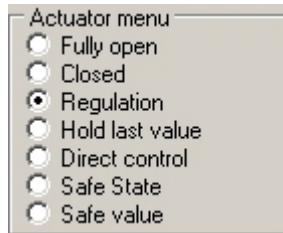


The actuator selector allows:

- **Fully open** open the valve;
- **Closed** close the valve;
- **Regulation** Standard regulation mode;
- **Hold last value** Keep the valve voltage constant;
- **Direct Control** The setpoint is directly converted in valve command;
- **Safe state** Goes in the safe state defined in the Alarm Page;
- **Safe value** Applies to the valve the safe value defined in the Alarm Page.

7.4.3. Digital mode

 According to the mass flow controller configuration, the mode is automatically set when Digisoft starts. The mode can be set by the operator as it is available in BASIC access level. See **section 7.2.4** for more details about access level on Digisoft.



In **digital setpoint mode**, the digital setpoint can be modified to predefined values by several aligned buttons. An additional button allows to choose a specific setpoint using the up and down arrows or the numerical keyboard.

 


Those buttons disappear when the analog setpoint mode is requested.

7.4.4. Auto zero

The check box is refreshed whenever the program enters the regulation page:

- When checked, it means that the readout is affected by an offset which cannot exceed $-1.5\%FS$ and $+1.5\%FS$.
- Unchecked means that no correction is applied to the readout.



When the command is checked, the MFC invokes (only once) the “**Zero adjust**” service. The current readout is captured and stored in non volatile memory. The captured readout is adjusted so that it does not exceed $-1.5\%FS$ or $+1.5\%FS$.

Consequent readout values are corrected in the following way:

$$\text{Readout} = \text{Readout} - \text{CapturedReadout}$$

When the command is unchecked, the **captured readout** is cleared and consequent readout values are no longer affected.

WARNING

Since the check box is only refreshed once when the program enters the regulation page, this information may conflict with "Automatic auto zero" on page "Others".

7.4.5. External sensor

The MFC's **external sensor** feature can be used in different applications, such as **pressure control** in vacuum process chamber, pressure control for wafer's back side cooling, **evaporation control** in gas bubbler and burner flame **temperature control** using gas.


This option is off by default when Digisoft starts, according to the mass flow controller configuration:



The flow measure of the MFC is not involved in the regulation, it is just an information which is given to the user. The regulation adjusts the valve command so that :

$$\text{external sensor (V)} = \text{setpoint (V)}$$

To activate this option, you need to enter the CUSTOMER access level. See **section 7.2.4** for further details on access level. Once activated, the **REGULATION** tab receives new features.

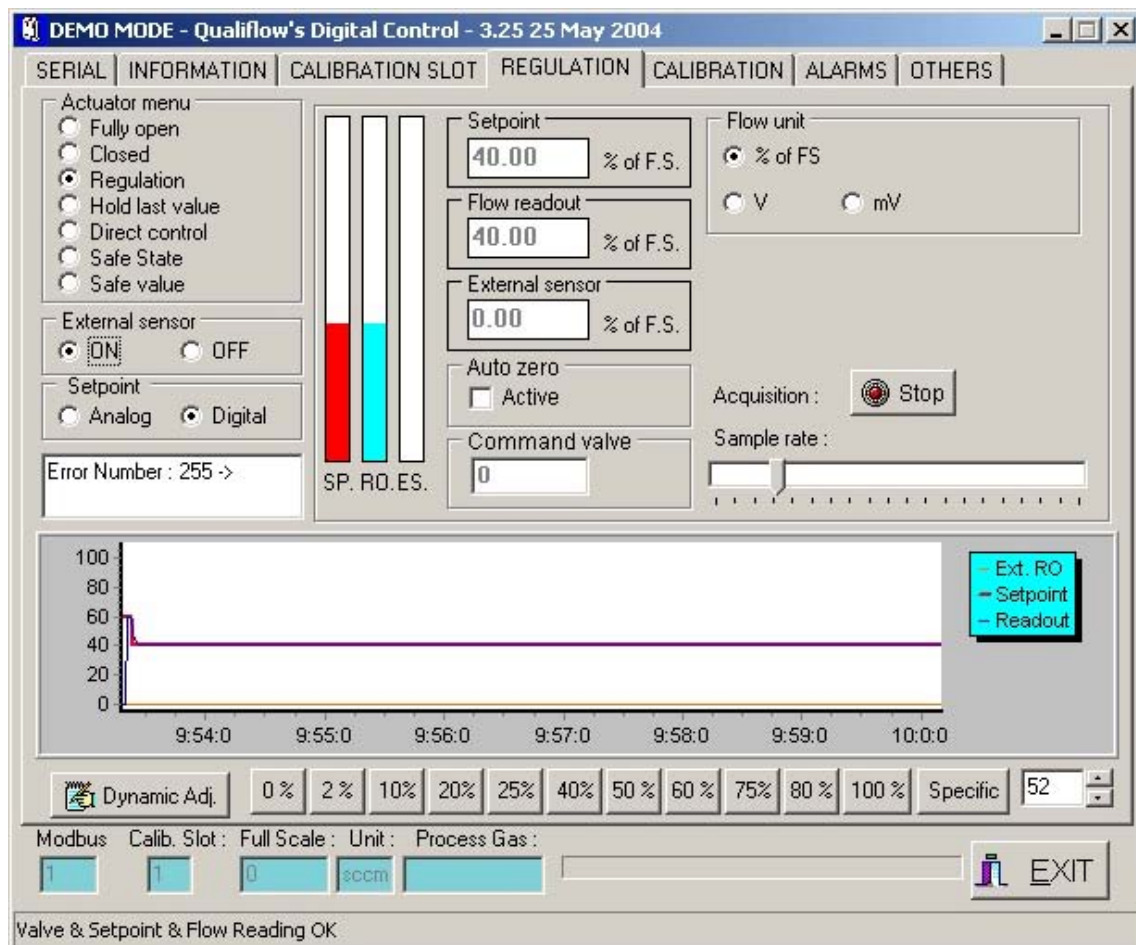


Input / output format


- Flow readout: 0V → flow = 0 (Digisoft display : 0V or 0 % Full Scale.);
5V → flow = MFC Full Scale (Digisoft display : 5V or 100% Full Scale.);
- Setpoint: between 0 and 5V (Digisoft display : xV or x% FS with 5V ⇔ 100% FS);
- External sensor : between 0 and 5V. (Digisoft display : yV or y% FS with 5V ⇔ 100% FS or 10V ⇔ 100% FS).

7.4.6. Flow unit

The **setpoint** and **readout** values are expressed in the selected unit.

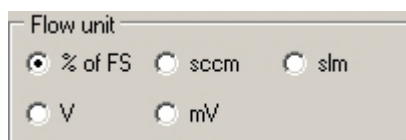

If the option "**External sensor**" is activated in the **REGULATION** tab, the flow unit group is as follows:

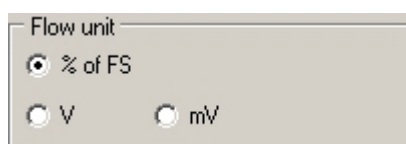

7.4.7. Graphic area features

A contextual menu is available using the right mouse button when the cursor is anywhere on the graphic area. Right click to display the following menu:



Legend

A legend gives information about the curves color code of the current setpoint and readout values. The legend may be hidden by using the contextual menu.




If the option "**External sensor**" is activated in the **REGULATION** tab, the legend includes the external sensor as follows:




Magnify

Double clicking with the left mouse button anywhere inside the graphic area allows to **magnify**. A new double click restores its initial size. This can also be performed by using the contextual menu.

Here is an illustration of the **Magnify** mode for graphic area:

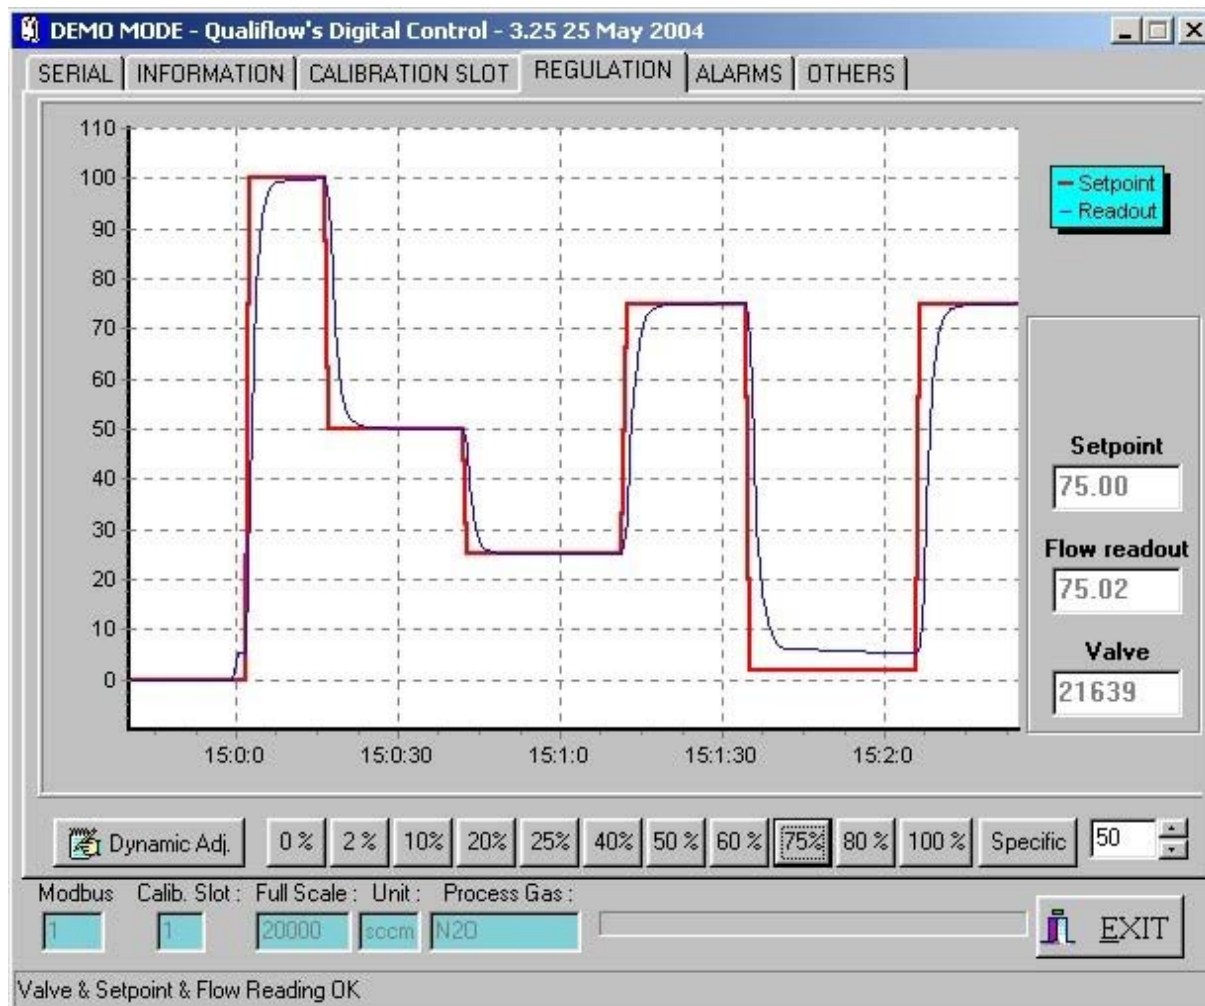

Current values for setpoint and readout are also displayed. They are displayed differently depending on the graphic area mode used, **normal** or **extended**:

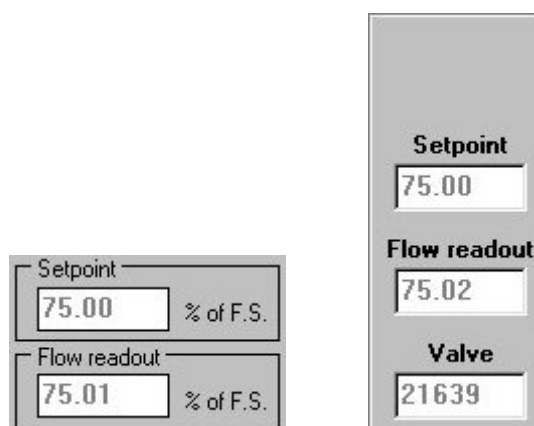

If the option "**External sensor**" is activated in the **REGULATION** tab, the readouts includes the external sensor as follows:

Setpoint 75.00 % of F.S. Flow readout 75.00 % of F.S. External sensor 0.00 % of F.S.	Ext. sensor 0.00 Setpoint 75.00 Flow readout 75.00 Valve 0
---	---

Zoom

You can zoom in by dragging a rectangle with the mouse around the area of interest.

IMPORTANT NOTICE


The rectangle must be dragged from top-left to bottom-right corner.

Un-zoom is performed by dragging a rectangle from bottom-right to top-left corner. Un-zoom can also be performed by using the contextual menu.

While in zoom state, curves do not scroll and will disappear as lifespan expires.

Print

The contextual menu allows printing the current graphic on the default printer. It is recommended to magnify the drawing before printing.

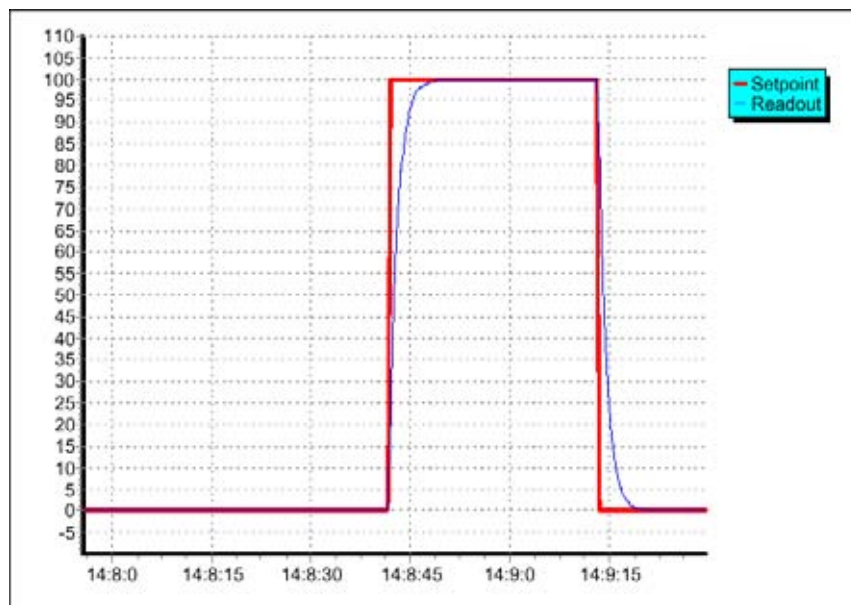

Clear

This command erases the current curve of the graphic area.

7.4.8. Sample rate

Acquisition can be started or stopped using the button below. The acquisition speed is also adjustable by the sample rate cursor.



7.4.9. Dynamic adjustment

7.4.9.1. Overview

The "**Dynamic Adjustment**" command button opens a window to tune the PID of the system for the use of an internal or external sensor and the valve. You need **CUSTOMER level access** to modify those parameters. In **BASIC level**, parameters are read-only.

NOTICE

The interface of this window depends of the firmware version. If version is 7.40, the following window appears. If firmware is older than 7.40, the old interface will appear.

Modifying dynamic parameters is restricted to qualified users only as you can damage the mass flow controller. Only Qualiflow's engineer can grant you access to these parameters.

Regulation control parameters [Slot number 1]

Internal sensor	
Tau2	0 s
Gamma	0
Sensor filter	10000.00 Hz
K	0
Tau	0 s
St	0 s
Beta	0
User RO filter	10000.00 Hz
Valve Group	
Init valve	0 bit
Min valve	0 bit
Max valve	0 bit
Threshold 0	
Disable linearization	

Write Close

7.4.9.2. Internal sensor

If the external sensor option from the **Regulation** tab is **off**, the window shows the parameters for the internal sensor and the valve group.

Three parameters can be modified with CUSTOMER level:

- **St** Desired settling time (second).
- **Beta** Adjustment coefficient (no unit);
- **User readout filter** Cutting frequency (Hertz).

Regulation control parameters [Slot number 1]

Internal sensor

Tau2 s

Gamma

Sensor filter Hz

K

Tau s

St s

Beta

User RO filter Hz

Valve Group

Init valve bit

Min valve bit

Max valve bit

0

0

0

0

0

0

Threshold

Disable linearization

Write

Close

The **internal sensor** group is divided into three parts.

Sensor conditioning parameters:

- **Tau2** Second order time constant (no unit);
- **Gamma** Weighting coefficient (no unit);
- **Sensor filter** Cutting frequency for sensor signal (Hertz).

Regulation parameters:

- **K** Static gain (no unit);
- **Tau** MFC time constant (second);
- **St** Desired settling time (second).

User readout parameters:

- **Beta** Adjustment coefficient (no unit);
- **User readout filter** Cutting frequency (Hertz).

7.4.9.3. External sensor

To access the interface of the external sensor regulation control parameters, the external sensor option from the **Regulation** tab must be **ON**. In order to do so, you need to run Digisoft with CUSTOMER level ON. See **section 7.2.4** for further details about level access in Digisoft.

External sensor

☐ ON
 ☒ OFF

When "ON" is ticked, the following window shows the parameters for the external sensor.

Five parameters can be modified with CUSTOMER level:

- **Kp** Gain (no unit);
- **Ti** Integration time (second);
- **Td** Derivate time (second);
- **Beta** Adjustment coefficient (no unit);
- **User readout filter** Cutting frequency (Hertz).

Regulation control parameters [Slot number 1]

External sensor

A

B %

Sensor filter Hz

Kp

Ti s

Td s

Tau s

Beta

User RO filter Hz

Valve Group

Init valve	<input type="text" value="1"/>	bit	<input type="text" value="1"/>
Min valve	<input type="text" value="1"/>	bit	<input type="text" value="0"/>
Max valve	<input type="text" value="40000"/>	bit	<input type="text" value="0"/>
			<input type="text" value="0"/>
			<input type="text" value="0"/>
			<input type="text" value="0"/>

Threshold

The **external sensor** group is divided into three parts.

Sensor conditioning parameters:

- **A** Gain (no unit);
- **B** Offset (percent of external sensor full scale);
- **Sensor filter** Cutting frequency for external sensor signal (Hertz).

Regulation parameters:


- **Kp** Gain (no unit);
- **Ti** Integration time (second);
- **Td** Derivate time (second).

As an example of PID regulation calibration method, you can read the following procedure, based on Ziegler-Nichols method. The **closed loop method** prescribes the following procedure:

- Step 1: Disable any D and I action of the controller ($T_i=1000$; $T_d=0$). Like a pure P-controller;
- Step 2: Make a setpoint step test and observe the response;
- Step 3: Repeat the SP test with increased / decreased controller gain until a stable oscillation is achieved. This gain is called the "ultimate gain" K_u ;
- Step 4: Read the oscillation period P_u ;
- Step 5: Calculate the parameters according to the following formulas:

$$PI: \text{Proportional gain} = 0.45 \times K_u \quad \text{integral time} = P_u / 1.2$$

$$PID: \text{Proportional gain} = 0.6 \times K_u \quad \text{integral time} = P_u / 2 \quad \text{derivative time} = T_u / 8$$

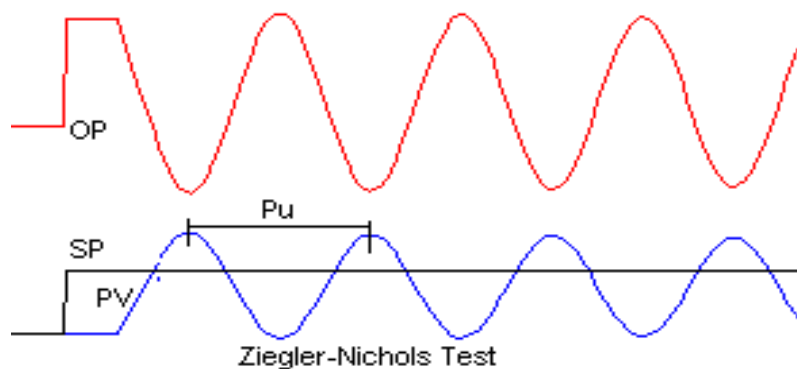

User readout parameters:

- **Tau** Process time constant (second);
- **Beta** Adjustment coefficient (no unit);
- **User readout filter** Cutting frequency (Hertz).

7.4.10. Specific error message: error 140

The point needs to be done on a specific error message: **"error 140 : sensor error"**.

In **Fully Open** regulation, this message can appear because the flow signal measured by the sensor is higher than the allowed values for full scale. In this particular case, the message doesn't state an error but a normal running situation.

However, this message can appear permanently in any **other regulation modes** as a result of a circuit failure or open circuit from the sensor.

7.5. ALARMS tab

7.5.1. Overview

7.5.2. Regulation monitoring

The regulation monitoring panel contains all data to parameter the regulation alarm:

After the alarm delay, there will be an alarm if the readout is not contained between the (Flow – Delta min) and the (Flow + Delta max).


The **alarm delay** is in seconds and the max and min Delta are in per thousand of the full scale.

The user chooses three parameters, the **Delta min**, the **Delta max** and the **Delay alarm**, to adjust the regulation alarm. Delta min and Delta max (in % FS) are the maximum differences between the readout and the setpoint to assure before the delay time. If the MFC does not correctly regulate, the alarm is on

until the user inhibits it. For example, if the pressure is too low, the MFC could not regulate the flow (see the figure below), therefore an alarm signal will be generated until acknowledgment.

The regulation alarm also drives the regulation LED :

- Readout and Set-point inside the +/- delta: Green regulation LED On;
- Readout and Set-point outside the +/- delta from less than delay (transient time): green regulation LED is blinking;
- Readout and Set-point outside the +/- delta from more than delay (regulation error): green regulation LED is OFF and Red Alarm LED is ON if **Alarm Warning** is ON.

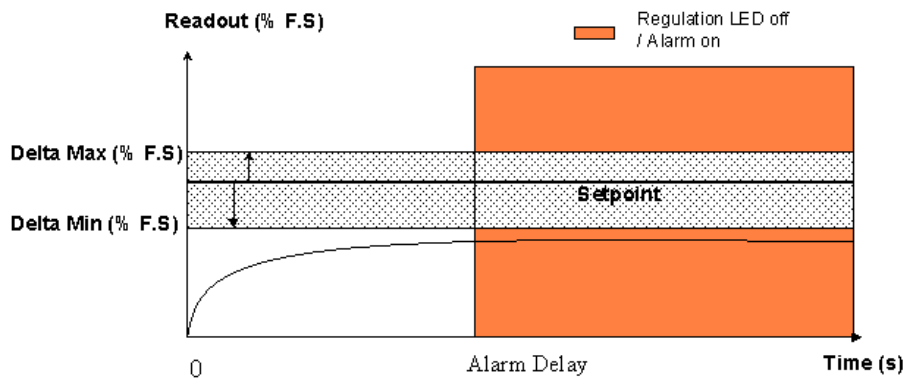


ADJUSTABLE ALARM

One issue with the regulation monitoring is that it may generate an alarm when there is no gas at the inlet of the mass-flow controller because when there is no gas if the requested setpoint is above 0% the readout will never be equal to the setpoint.

The mass flow controller is "intelligent enough" to detect when the readout and the setpoint are not equal because there is no gas. However it has been observed that when there is no gas sometimes the regulation monitoring can generate an alarm when setpoint is above 0%, so it is possible to switch off the alarm warning due to the regulation monitoring. Note that if a hardware alarm occurs, it will generate an alarm even if alarm warning is off.

7.5.3. Error parameters

Clicking on the "**Read and Acquit**" button of the error panel allows to list the mass-flow internal errors with their number and explanation.

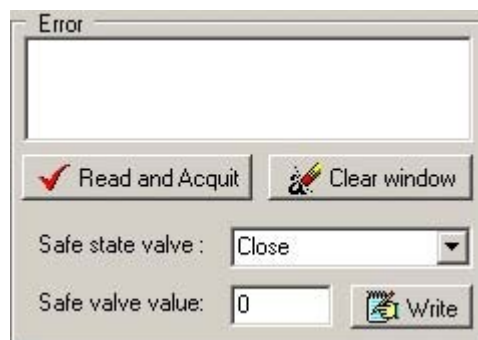


The "**Clear window**" button erases the list of errors.


The "**Safe state valve**" fields allow setting the state of the valve when an error occurs.

7.5.4. History recorder

When the history recorder is "ON", the valve voltage, setpoint, reading of the sensor, error status and flow are stored each **xx** seconds, where **xx** is the value written in the **sample rate** dialog. The sample rate can be changed and the total time of recording is automatically refreshed.

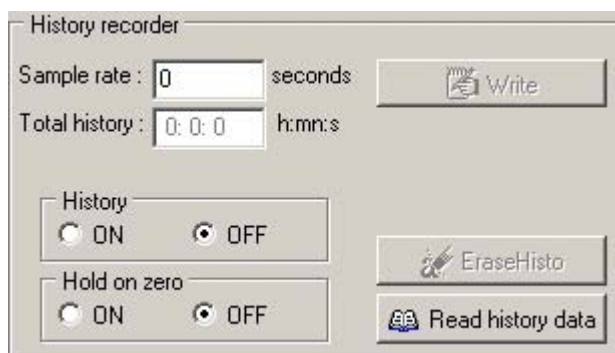


History recorder

 
Sample rate : 0 seconds 

Total history : 0: 0: 0 h:mn:s

History
☐ ON ☒ OFF


Hold on zero
☐ ON ☒ OFF

 EraseHistory

 Read history data

The "**Hold On Zero**" function allows to record data only when setpoint is above 2% in order to avoid to record mass-flow activities when there is no processing. When "**Hold On zero**" is "OFF", data is recorded even when setpoint is zero.

The "**Read History Data**" button allows to consult all data in memory. Data is available in TXT format and can be imported in Microsoft Excel (data saved as a *cvs* file). Predictive maintenance can be done with a minimum training on mass-flow controllers. Here is the **MFC history** window:

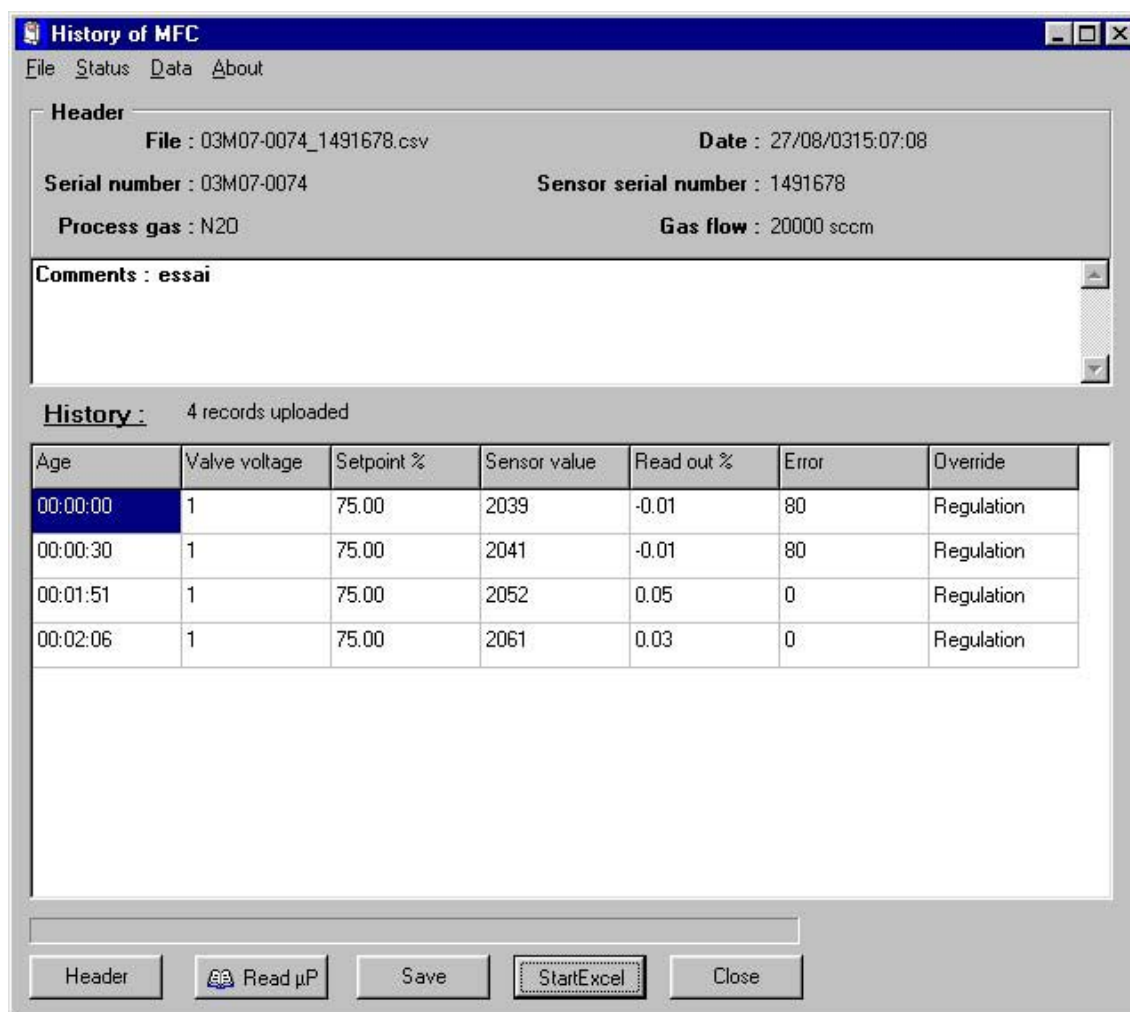

History of MFC

File Status Data About

Header

File : 03M07-0074_1491678.csv Date : 27/08/0315:07:08



Serial number : 03M07-0074 Sensor serial number : 1491678

Process gas : N2O Gas flow : 20000 sccm

Comments : essai

History : 4 records uploaded

Age	Valve voltage	Setpoint %	Sensor value	Read out %	Error	Override
00:00:00	1	75.00	2039	-0.01	80	Regulation
00:00:30	1	75.00	2041	-0.01	80	Regulation
00:01:51	1	75.00	2052	0.05	0	Regulation
00:02:06	1	75.00	2061	0.03	0	Regulation

Header  Read µP Save  StartExcel Close

7.6. OTHERS tab

7.6.1. Overview

This panel contains useful functions for the maintenance and particular applications:

DEMO MODE - Qualiflow's Digital Control - 3.25 25 May 2004

SERIAL | INFORMATION | CALIBRATION SLOT | REGULATION | ALARMS | **OTHERS**

Ramp rate
Time (ms) 0
Write

Analog Readout
☐ +0.020V to +5.5V
☒ -0.5 V to +5.5V

Automatic Autozero
☐ ON 0 0 --> 3276 s
☒ OFF Write

Readout DAC Offset
 -1000 mV (0 --> +/-1000) Write

Soft start
☐ ON Delay 0 0 --> 12s
☒ OFF Write

Total Accumulator
 Total 0 scc Read
 Total2 0 scc Read
 Hour 0 h Read

Read MFC

Modbus 1 Calib. Slot 1 Full Scale 0 Unit sccm Process Gas
 EXIT


Soft Start Reading OK

7.6.2. Ramp rate

The ramping function increases linearly the setpoint to assure a progressive increasing of the flow.

Ramp rate
Time (ms) 0
Write

It is expressed in milliseconds. A value of 0 ms disables the ramping mode. The maximum ramping time is 10 hours, that is 36000000 ms. When ramping is active, the MFC calculates periodically the actual setpoint so that the target setpoint is reached when the ramping delay expires and making a linear ramp.

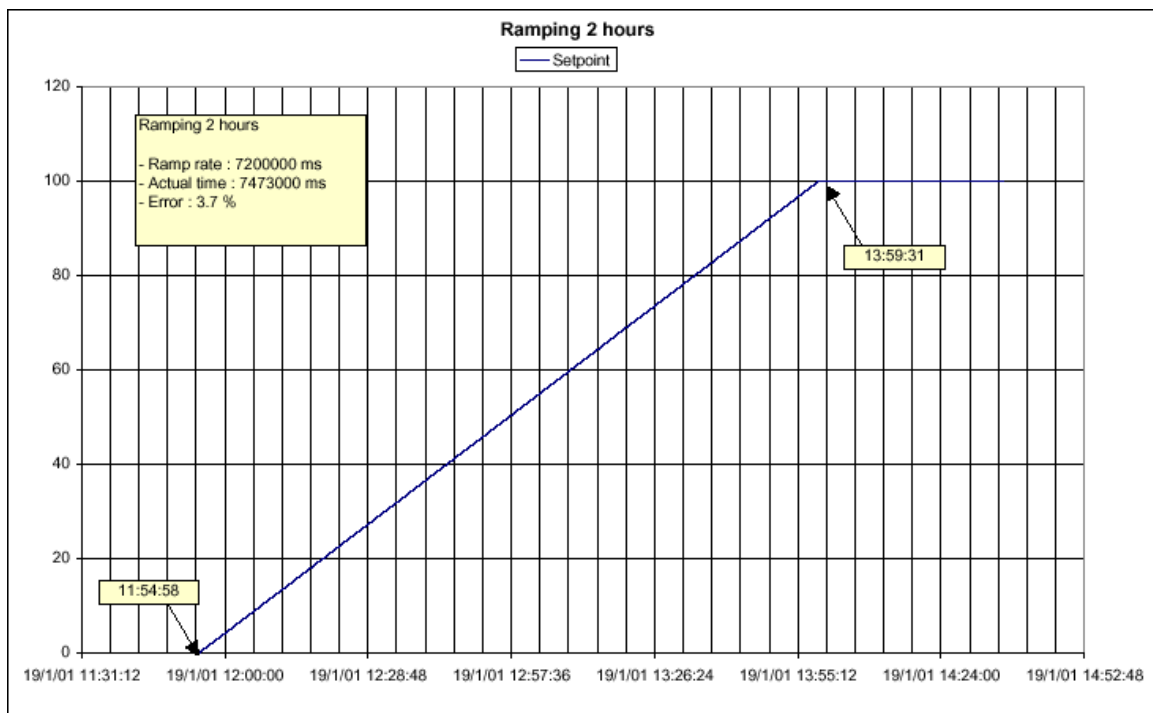

7.6.3. Analog readout (On/Off)

These checkboxes allow to avoid negative readout on the analog readout pin of the Sub-D connectors (particular applications for supervisors compatibility).

Analog Readout

☐ +0.020V to +5.5V

☒ -0.5 V to +5.5V

7.6.4. Automatic Auto-zero (On/Off)

If ON, after the given time of flow below 1.5%, the mass-flow will automatically proceed to an auto zero (see [section 7.4](#) for further details).

Automatic Autozero

☐ ON 0 ---> 3276 s

☒ OFF

7.6.5. Readout DAC Offset

An offset can be added to the readout value with a range of ± 1000 mV. The purpose of this offset value is to read 0V when gas flow is nil.


Type the value of offset in the text field and press the "Write" button.

Readout DAC Offset

mV (0 ---> +/-1000)

7.6.6. Soft start (On/Off)

The **Soft Start** function avoids big overshoots when starting opening the gas flow in the line. This overshoot, which appears when you suddenly open the supply valve, is due to the pressure wave which travels from the supply valve to the mass flow controller. This pressure wave creates a rapid flow change that the controller's sensor reads.

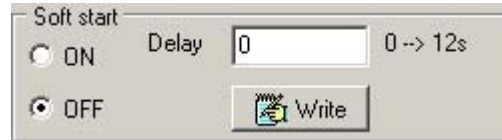

The **Soft Start** function will not reduce the spike. It will just delay the opening of the mass flow controller valve so that the regulation is not disturbed by the spike. Many "hardware" solutions can reduce this spike without playing with the **Soft Start** function:

- Check that the pressure upstream from supply valve is not too high. The pressure drop across the MFC should not exceed 2bar (30psi). You can try to reduce the upstream pressure and see if it affects the amplitude of the spike;
- If it is not enough, the best solution consists in placing the pressure regulator between the supply valve and the MFC. In such a case the pressure regulator will absorb the pressure wave and the spike should be reduced;
- Contact Qualiflow support team for further information.


When **Soft Start** function is **ON**, two parameters can be tuned:

- The "**delay**" parameter is the time between the setpoint change and the regulation really starts. Set it first to about 3 seconds. This means that the mass flow controller will wait 3 seconds before regulating. It should be enough time for the "pressure spike" to decay. If you don't have spike anymore, set it to 0.05 second, and the MFC will start working just after the setpoint change.
- For fine adjustment, the CUSTOMER level must be entered in order to access the "**Init valve**" parameter. The "**Init Valve**" is the initial valve voltage applied to the valve when the setpoint changes from a close position to a non zero setpoint value. The mass flow controller applies "**Init Valve**" value for "**Delay**" time whenever the setpoint passes from <1.5% to any >1.5% of full scale. This is to make sure the valve is under control in pneumatic critical situations (e.g.: shut-off valves opening).


Note:

- If your flow controller is **Normally Closed**, try to increase the *Init Valve* value until you get a reasonable settling time.
- If your flow controller is **Normally Open**, try to decrease the *Init Valve* value until you get a reasonable settling time.


Soft Start function for a Normally Closed MFC

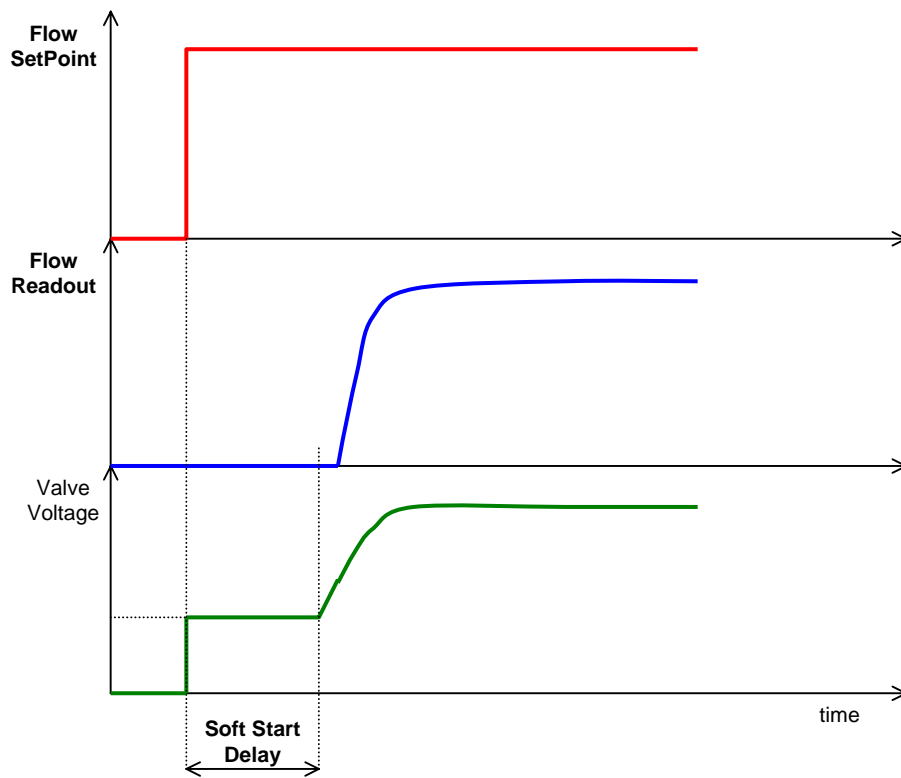

Consequence of a too low "Init Valve"

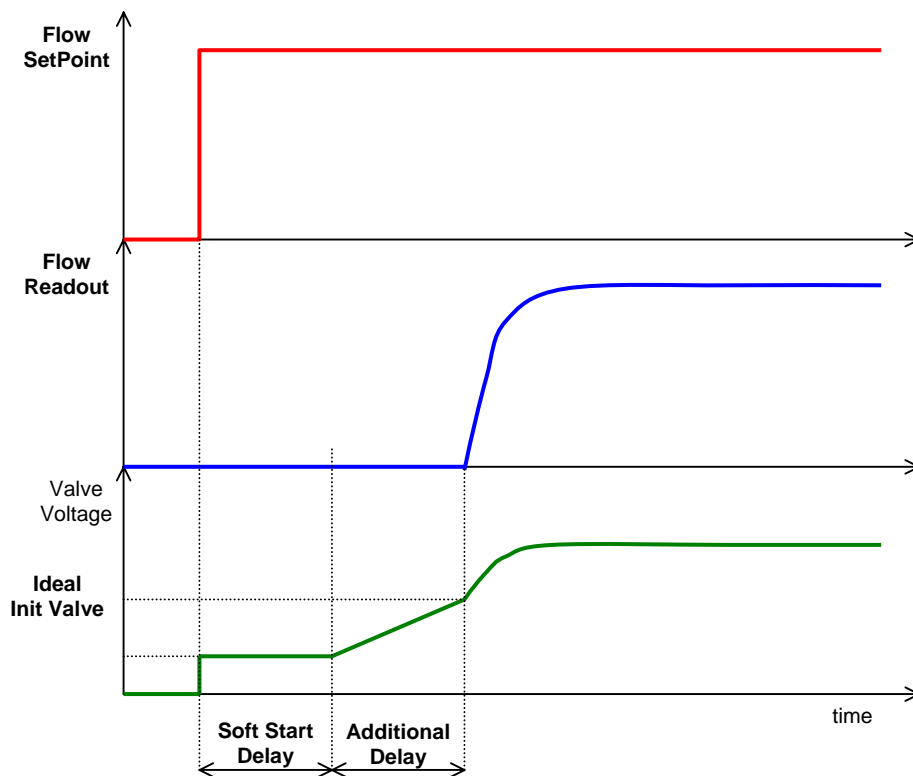

Consequence of a too high Init Valve

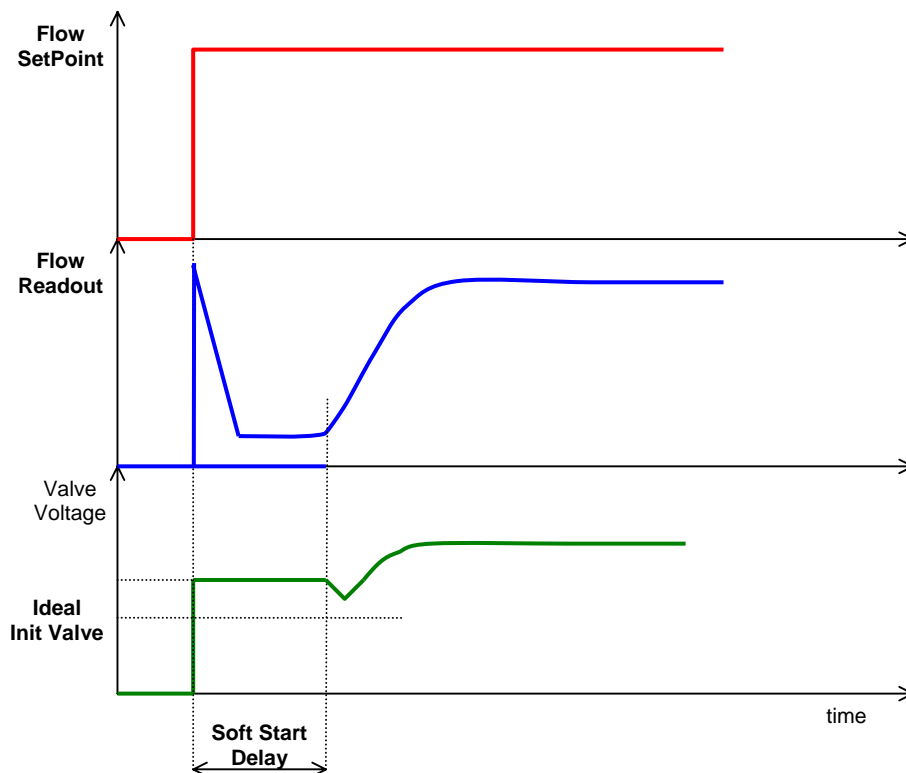

7.6.7. Total accumulator

The total value indicates the cumulative flow in sccm since the last initialization. It is useful to have a look on the gas consumption.

Total Accumulator			
Total	<input type="text" value="0"/>	scc	Read
Total2	<input type="text" value="0"/>	scc	Read
Hour	<input type="text" value="0"/>	h	Read

- **Total** is memorized in non volatile storage when historic function is ON and will not be reset in case of power shut-down;
- **Total 2** will be automatically reset in case of power shut-down;
- **Hour** states the number of working hours for the mass flow controller.

Note that both total values are reset to zero when there is a change of calibration slot.

Total can be typically used to monitor the total gas consumption. **Total 2** can be used to monitor gas consumption during a process batch.

oOo